


Using an A/R ignition amplifier and Mallory Dual Point distributor

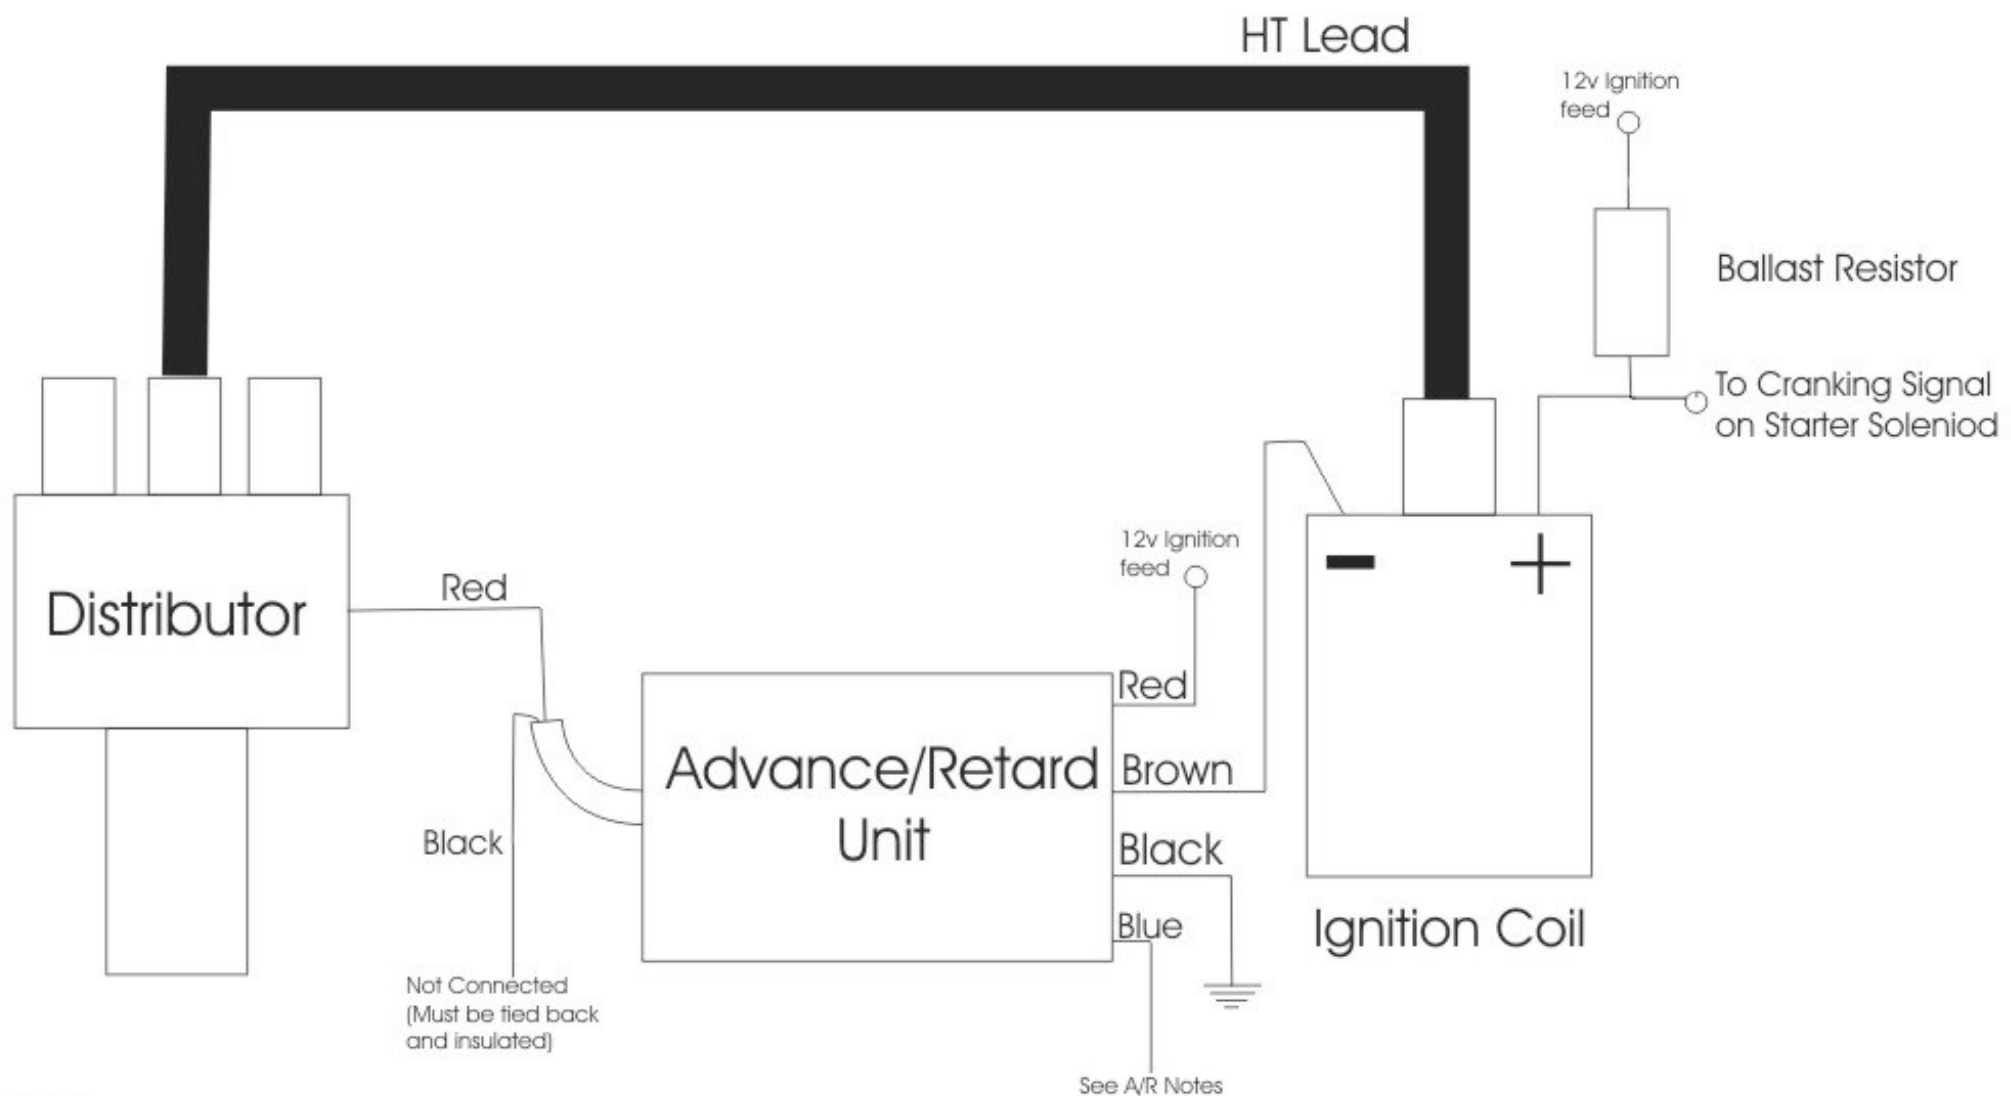

Notes:

- The 'points' link inside the A/R unit should be made (See A/R Notes).
- The Black input wire on the A/R unit should be left disconnected.
- The Blue wire on the A/R unit should be connected as shown in the A/R note (Blue wire only applicable if LPG version)